



LIQUID FLOW SWITCHES

SF

FUNCTION

Flow control of aggressive media, water and normal media (depending on model).
Alarm signal of flow shortage (safety switch).
Available in brass, suitable for normal media, and in stainless steel AISI316L, suitable for sea water and aggressive media.

APPLICATIONS

Well-suited in pipes of general industrial plants:

- heating and air conditioning systems;
- refrigeration systems;
- sprinkler or anti-fire systems;
- heat pumps;
- devices for oil monitoring;
- lubrication circuits.

TYPE	PIPE Ø	MAX PRESSURE bar	NORMAL MEDIA (body in brass)	AGGRESSIVE MEDIA (body in stainless steel AISI 316L)	BODY WITH PIPE FITTING “T”	PROTEC- TION	FLOW RATE
SFIK	1...8"	11	•			IP65	1
SF1E*	1...8"	11	•			IP65	1
SFIRE	1...8"	11	•			IP65	2
SF2E**	1...8"	30		•		IP65	1
SF2RE	1...8"	30		•		IP65	2
SF3E	1/2"	11	•		•	IP65	3
SF4E	3/4"	11	•		•	IP65	3
SF6E	1"	11	•		•	IP65	3
Accessories	DBZ-09 - Stainless steel Aisi 316L paddles for liquid flow switch						

NPT 1" NPT connector

* models with TÜV approval

** models with TÜV approval

TECHNICAL FEATURES

Contacts:	dust-tight microswitch with switching contacts (n.c./n.o.)
Switch capacity:	15 (8) A, 24...250 Vac
Working:	-40...+85 °C 10...90% r.h. (without condensing)
Max liquid temperature:	-40...+120 °C
Max pressure:	11 bar (SF2: 30 bar)
Fitting:	see flow rate schedule
Body:	see schedule above
Paddles:	stainless steel AISI 316L
Housing:	Base in ABS, transparent PC cover
Storage:	-40...+85 °C < 95% r.h.
Protection:	IP65, class I
Size:	140 x 62 x 65 mm
Weight:	950 g



LIQUID FLOW SWITCHES

(1)

**H₂O FLOW RATE
SFIK/SF1E/SF2E**

Pipe connector Ø	Qmax m ³ /h recommended	Min. adjustment m ³ /h cut-off (cut-in)	Max. adjustment m ³ /h cut-off (cut-in)
1"	3,6	0,6 (1,0)	2,0 (2,1)
1 1/4"	6,0	0,8 (1,3)	2,8 (3,0)
1 1/2"	9,0	1,1 (1,7)	3,7 (4,0)
2"	15,0	2,2 (3,1)	5,7 (6,1)
2 1/2"	24,0	2,7 (4,0)	6,5 (7,0)
3"	36,0	4,3 (6,2)	10,7 (11,4)
4"	60,0	11,4 (14,7)	27,7 (29,0)
4" Z	60,0	6,1 (8,0)	17,3 (18,4)
5"	94,0	22,9 (28,4)	53,3 (55,6)
5" Z	94,0	9,3 (12,9)	25,2 (26,8)
6"	120,0	35,9 (43,1)	81,7 (85,1)
6" Z	120,0	12,3 (16,8)	30,6 (32,7)
8"	240,0	72,6 (85,1)	165,7 (172,5)
8" Z	240,0	38,6 (46,5)	90,8 (94,2)

(2)

**H₂O OF LOW RATE
SF1RE/SF2RE**

Pipe connector Ø	Min. adjustment m ³ /h cut-off (cut-in)	Max. adjustment m ³ /h cut-off (cut-in)
1"	0,2 (0,6)	1,0 (1,1)
1 1/4"	0,25 (0,9)	1,4 (1,6)
1 1/2"	0,5 (1,2)	1,6 (2,2)
2"	0,9 (2,3)	3,6 (4,1)
2 1/2"	1,2 (3,1)	4,9 (5,5)
3"	2,1 (4,9)	7,4 (8,2)
4"	4,9 (11,3)	17,1 (19,1)
4" Z	3,3 (7,7)	11,6 (13,0)
5"	9,7 (22,4)	34,0 (37,9)
5" Z	5,0 (11,5)	17,5 (19,6)
6"	13,6 (31,5)	47,6 (53,2)
6" Z	6,1 (14,1)	21,4 (23,9)
8"	25,7 (59,6)	90,1 (100,7)
8" Z	21,7 (36,5)	55,3 (61,8)

For models with suffix "Z" the longest paddle must be used to obtain the values indicated on the table.

Pressure drop at the maximum flow (Qmax): 0,08 bar


Paddles (models without "T" pipe fitting)

(3)

**FLOW RATE WITH „T“ PIPE FITTING
SF3E /4E /6E**

DBSF-	Pipe connector with „T“ pipe fitting Ø	Min. adjustment m ³ /h cut-off (cut-in)	Max. adjustment m ³ /h cut-off (cut-in)
3E	1/2"	0,174 (0,48)	0,846 (0,948)
4E	3/4"	0,138 (0,408)	0,768 (0,858)
6E	1"	0,2 (0,6)	1,0 (1,1)

The "T" connectors have cylindrical GAS thread.

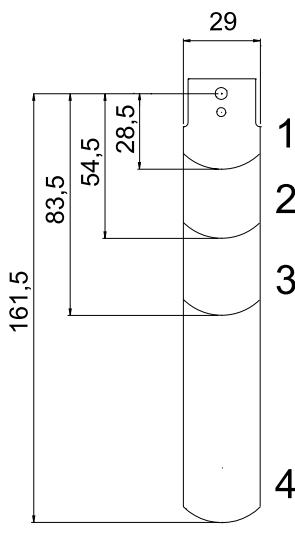

PIPE	PADDLES
1"	1
1 1/4"	1
1 1/2"	1
2"	1,2
2 1/2"	1,2
3"	1,2,3
4"	1,2,3
4" Z	1,2,3,4
5"	1,2,3
5" Z	1,2,3,4
6"	1,2,3
6" Z	1,2,3,4
8"	1,2,3
8" Z	1,2,3,4



LIQUID FLOW SWITCHES

WIRING DIAGRAM

Diagram during flow presence.

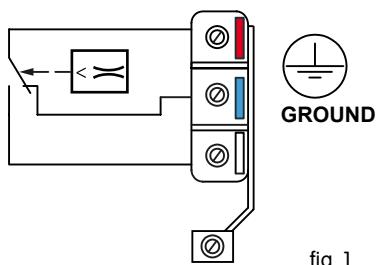


fig. 1

NOTE

The flowswitch is factory calibrated at its min. sensitivity. To increase the set value turn clockwise the adjustment screw. The cut-out value must be >- the minimum flow necessary to guarantee the protection of the plant. The units without "T" fittings are supplied with 4 paddles, which must be cut off according to the pipe. All devices can be supplied with "T" connection on request as schedule indications.

ATTENTION



If flowswitch is used as a minimum flow controller, it is necessary to add another device downstream for alarm condition activation.

Connect to red and to white contacts of the microswitch (fig. 1). The contact red-white opens when the flow drops below the set level. When the flow is missing the contact red-blue closes and can be used as a signal or alarm contact.

INSTALLATION

The flowswitch can be installed in every position far from elbows or throttlings, with arrow on flow direction. If pipe is vertical, recalibrate range to balance paddle weight. If the device is downwards mounted take care to slags, and apply it in a straight pipe far from filters, valves, etc with length at least 5 times the diameter of pipe upstream and downstream the unit.

DIMENSIONS (mm)

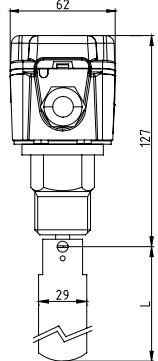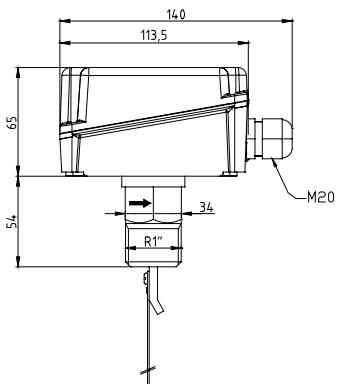

MOUNTING INSTRUCTIONS

